


# INSTRUCTION MANUAL & WARRANTY

Alarm clock with color-changing projection nightlight

## BUTTONS AND PARTS

|   |               |   |                                   |
|---|---------------|---|-----------------------------------|
| A | Battery Cover | E | Alarm On/Off Button               |
| B | Time Set      | F | Projection Button / Snooze Button |
| C | Minute Button | G | Alarm Set                         |
| D | Hour Button   |   |                                   |

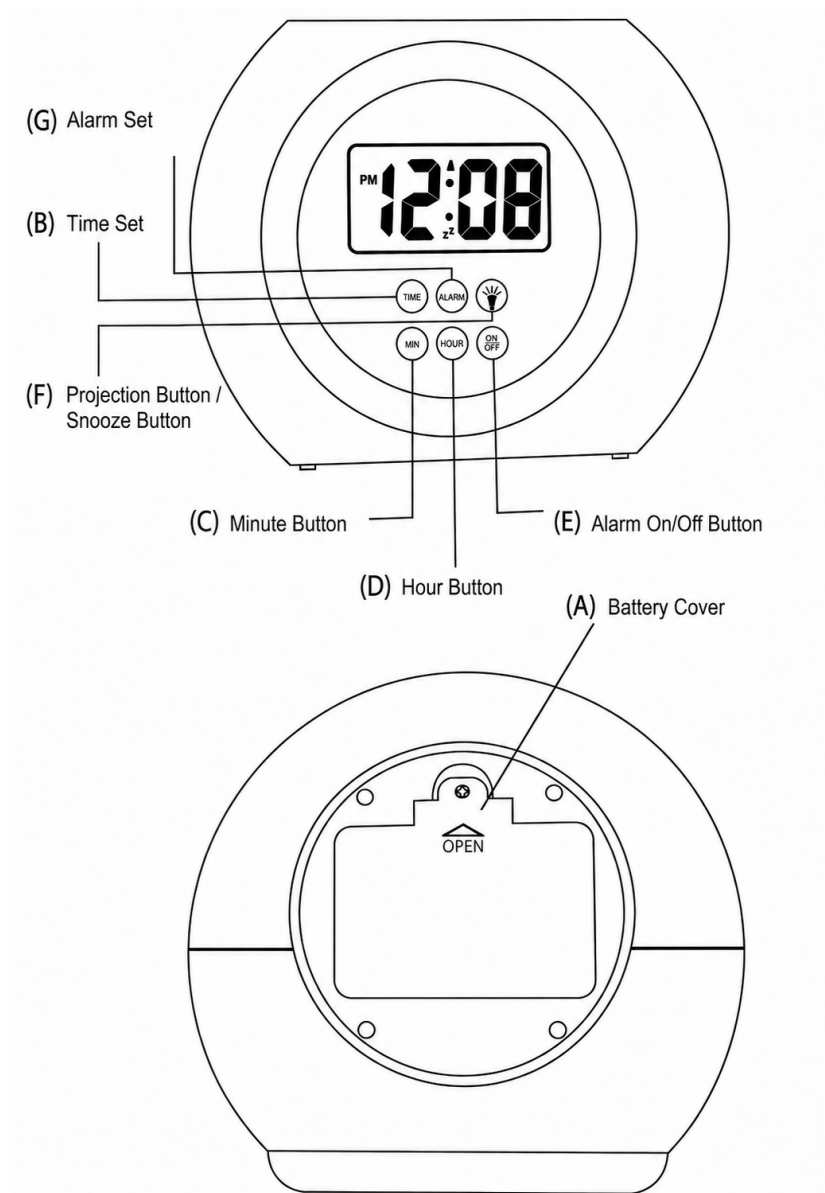

# INSTRUCTION MANUAL & WARRANTY

Alarm clock with color-changing projection nightlight

## 1. TO ACTIVATE THE CLOCK

1. Unscrew and remove the battery cover (A).
2. Insert three AAA-size batteries, ensuring that the polarity is aligned as indicated inside the battery compartment.
3. Replace the battery cover (A) and tighten the screw.

## 2. TO SET THE TIME

1. Press and hold the Time Set Button (B).
2. Press the Hour Button (D) until the desired hour is reached.
3. Press the Minute Button (C) until the desired minute is reached.
4. Release the Time Set Button (B). The time is now set.

## 3. TO SET THE ALARM

1. Press and hold the Alarm Set Button (G).
2. Press the Hour Button (D) until the desired alarm hour is reached.
3. Press the Minute Button (C) until the desired alarm minute is reached.
4. Release the Alarm Set Button (G). The alarm time is now set.
5. Press the Alarm On/Off Button (E) to activate the alarm.

## 4. TO DISABLE THE ALARM

While the alarm is sounding, press the Alarm On/Off Button (E) to shut off the alarm.

## 5. TO ACTIVATE THE ALARM SNOOZE

Press the Snooze Button (F) to activate a 5-minute snooze. The color-changing projection lights will activate for 15 seconds.

## 6. DISPLAY BACKLIGHT, PROJECTION AND NIGHTLIGHT

The Projection Button (F) controls the display backlight and the color-changing projection nightlight.

| PRESSES   | FUNCTION                                                             |
|-----------|----------------------------------------------------------------------|
| 1 press   | The display backlight and projection lights activate for 15 seconds. |
| 2 presses | The nightlight operates for 30 minutes. The LCD displays 30.         |
| 3 presses | The nightlight operates for 15 minutes. The LCD displays 15.         |
| 4 presses | The nightlight operates for 5 minutes. The LCD displays 5.           |
| 5 presses | The nightlight turns off. The LCD displays OFF.                      |

# INSTRUCTION MANUAL & WARRANTY

Alarm clock with color-changing projection nightlight

## NOTE

Should the timekeeping become erratic, replace the batteries, as this indicates that they are weak or depleted. Remove the batteries when the clock is not in use for extended periods. Do not subject the clock to violent shocks, extreme temperatures, or direct sunlight.

## IMPORTANT REMINDERS

1. Always replace the battery cover in its proper position.
2. Use new AAA alkaline batteries for better reliability.
3. Do not open the back case of the clock, as this may damage the clock movement.
4. Remove the AAA batteries if the clock is not in use.

## BATTERY PRECAUTIONS

- Clean the battery contacts and those of the device before installing the batteries.
- Follow the polarity (+) and (-) markings when installing the batteries.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Incorrect battery placement may damage the clock movement and cause the batteries to leak.
- Exhausted batteries must be removed from the product.
- Remove batteries from equipment that will not be used for an extended period.
- Do not dispose of batteries in fire. Batteries may explode or leak.

## WARRANTY

This product has a 12-month warranty.